

 
The delta player has four buttons: *mode*, *set*, *up* and *down*. There are two modes of operation: clock and program. By default when the player is powered on it enters in clock mode: a 24h format clock is shown like the figure below:

```
12:35
**Ready**
```

In this state, the hour might be adjusted by pressing *set* button. The hour indicator will start blinking and by pressing *up* and *down* the user might change the hour value. The minute value can be changed by pressing the *set* button again.

The *mode* button will toggle between clock mode and alarm mode. The alarm mode is shown in the figure below:

```
AL1 OFF
Track 00001
```



```
AL1 15:30 01.30
Track 00001
```

In this state *up* and *down* buttons will loop alarms from 1 to 9. By pressing *set* button we can change the value of the different fields:

- Alarm activation: ON | OFF
- Hour: Hour of alarm in HH:MM format.
- Duration: Duration of alarm in MM.SS format
- Number of Track: A given track number to be played. Note that a special track RND is used to play a random track. It will substitute the Track number 0.

Once the alarm is activated the track being played is shown in the clock mode:

```
12:35
**Play 00001**
```